## VEHICLE EMISSION CONTROL INFORMATION LABEL

The Vehicle Emission Control Information Label is located under hood. The label contains important emission specifications and setting procedures, as well as a vacuum hose schematic with emission components identified.

PC

(B TI

TI

Tin

W

n

When servicing the engine or emission systems, the Vehicle Emission Control Information Label should be checked for up-to-date information.

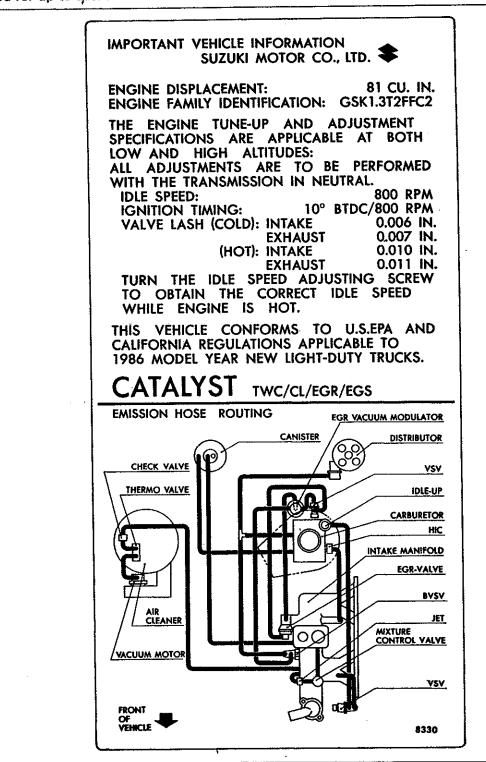


Fig. 5-1-2 Vehicle emission control information label (Sample)